



PestBlaster

DURABLE • EFFICIENT • VERSATILE

Powder Duster

Cordless Electric Duster for
Pest Control Professionals

**Product Specifications
& User Manual**

Table of Content

Performance parameters	1
Device features	2
Accessories	3
How to use	4
Precautions	6
Tips for use	7
Troubleshooting	9
Warranty	10

PEST*TOOL* 
equipment

Performance Parameters

Model IPP-PT002-PB

Overall weight 3KG

Overall dimension 330mm X 95mm X 390mm

Powder container capacity 250ml


Lithium battery capacity 1800mah (11.1V)

Device runtime (full charge) Less or equal to 4 hours

Rated voltage DC12V

Charger 12.6V 1000ma

 Device Features

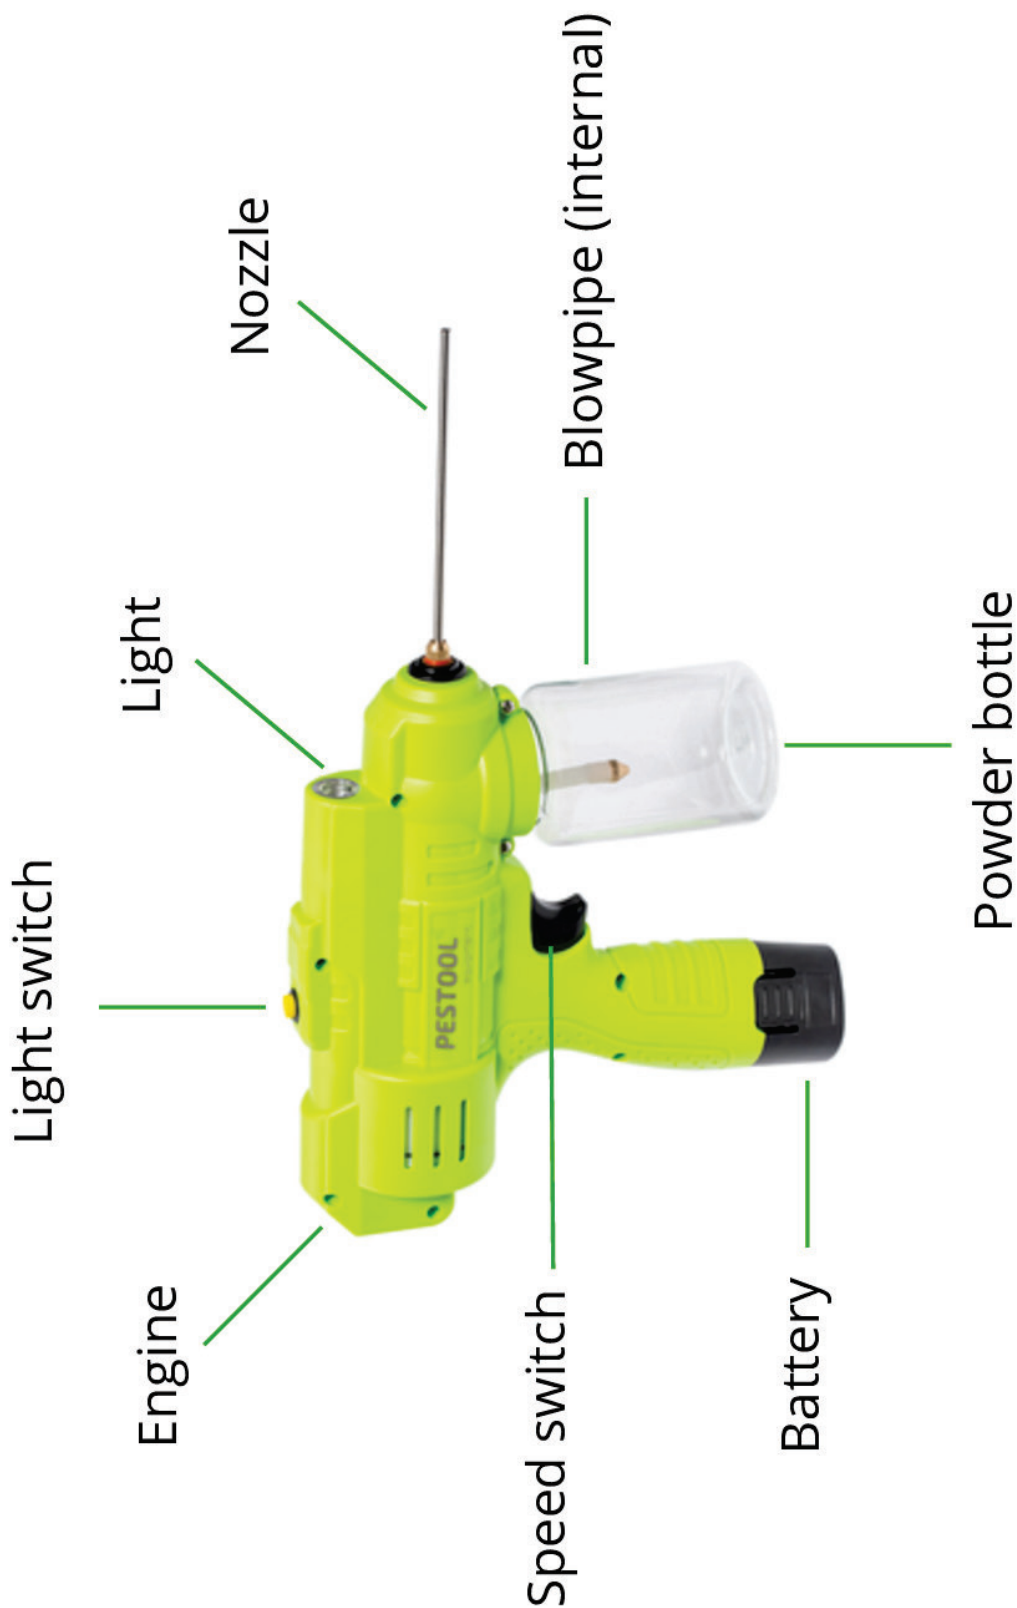

Accessories



 
Charger




2 x Powder Bottle and Caps



2 x Rechargeable Battery

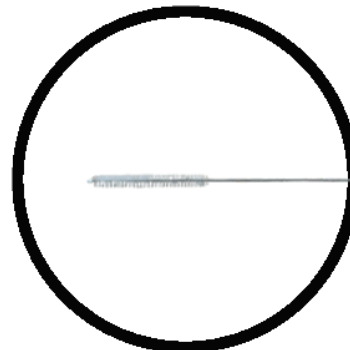


Cleaning Brushes

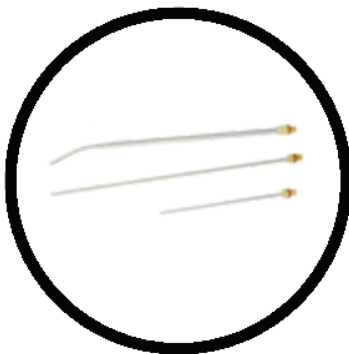 


Pipes & Nozzles



 Carrying Case

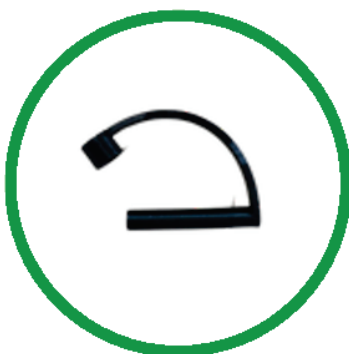

Rubber Tips

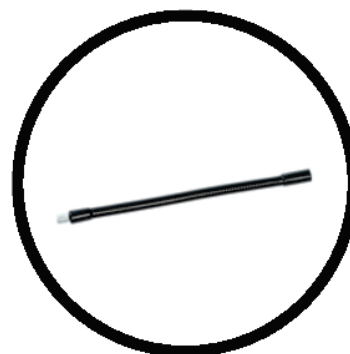 

Rubber Wrapped
Snake Tube

How To Use

STEP 1

Remove the PestBlaster device from its packaging.

STEP 2

The device will come with one battery already inserted, but we recommend removing it and charging it to full battery capacity prior to using the device. Once the battery is charged, press the two battery latches, insert the battery into the port at the bottom of the device handle, and then release the latches.

STEP 3

Take out the powder bottle and fill it with an appropriate amount of dust insecticide (between 30%-50% of the bottle). Be careful not to fill it completely, otherwise the dust might not spray. Screw the bottle in a clockwise direction. Note that it's very important to tighten the bottle.

STEP 4

Take your chosen nozzle, screw it clockwise onto the powder outlet of the electric duster, and tighten it to seal the powder outlet.

How To Use

STEP 5

When using in a dark space, you can press the light button located on the top of the device to maintain sufficient visibility.

STEP 6

Once you are ready to begin your treatment, while holding the electric duster, press the speed trigger to spray the dust into the desired location of your pest treatment. The pressure force can be adjusted based on the pressure you apply to the trigger.

STEP 7

After use, remove the powder bottle and close it tightly with the cap provided. The powder should not be emptied. Press the two battery latches, remove the battery, and use the charger by inserting the charger into the port located at the top of the battery. When the charger light turns green, it means it is fully charged. Clean the insertion points to prevent the powder from accumulating in the machine.

Precautions

- 1) Do not rinse the electric duster device with liquid of any kind.
- 2) Do not use in high humidity environment.
- 3) This product does not support accessories that have not been provided in your PestBlaster carrying case. If any outside accessories are used with the product, the warranty will not be granted.
- 4) If the device is not used for an extended period, the battery should still be charged and discharged each month for maintenance, otherwise the battery may lose function.

Tips for use

Use the Appropriate Nozzle

1) The fine nozzle is suitable for relatively fine and light dust insecticides. Thick powders that absorb moisture can block the nozzle. If the tube is clogged, make sure to unscrew the tube, clean it, and check that it's clear before using it again. To do this, you can use a cleaning rod or a compressed air canister.

2) Thicker nozzles with a sealing gasket are suitable for slightly heavier powders. This does not mean it won't get clogged, but using a thicker nozzle reduces the chances of outlet blockage. If the hose is clogged, unscrew and clean it before attempting use again.

Bottles usage

It is recommended not to fill the bottle more than 50%. This helps facilitate the use of the device and prevents the tubes from becoming clogged.

Tips for use

Battery Usage

Press the two latches of the battery to remove it from the PestBlaster device and insert the charger into the charging port on the top part of the battery. While charging, it's normal for the charger to emit noticeable heat.

Do not charge without supervision. After each use, ensure the battery is fully charged before storing it.

If the electric duster is not in use, the battery should be maintained by charging and discharging it once a month, or else the battery may become damaged or lose function.

Troubleshooting

- 1) If the electric duster is not working, charge the battery or replace it.
- 2) If the powder spray isn't smooth, check if the powder outlet hose is blocked, and clean it. It is strictly forbidden to continue using it when it's blocked, which could cause the bottle to break and lead to injuries.
- 3) If powder is leaking, unscrew the bottle and clean the powder at the junction between the bottle and the electric duster. Once cleaned, tighten the bottle.
- 4) If the problem is still not resolved, please contact the manufacturer for after-sales service.

Warranty

The powder outlet tube and powder bottle are guaranteed for one (1) month.

Charger and battery are guaranteed for six (6) months.

Consumable parts are not covered by the warranty.

Body is guaranteed for one (1) year.

The above is a warranty for non-man-made damage. There is no warranty for man-made damage.

Powder Duster (PestBlaster)

Model: IPP-PT002-PB



IPP Brands Inc.

9150, Meilleur Street, Montreal H2N 2A5 (Quebec), Canada